

AXIUM DX4000 Desktop

User Guide



Terminal ready for
visual impaired people

www.ingenico.com

16 Place de L'Iris Tour Cb21 92400 Courbevoie – France

Banks and Acquirers International Holding, SAS / 814 767 216 RCS Nanterre

Contents

1. Introduction	4
2. Presentation	5
2.1 Content of the box	5
2.2 Overview of AXIUM DX4000 Desktop	6
2.3 Key Locations and Functions.....	8
2.4 Touch Panel.....	8
3. Use of the terminal	9
3.1 Power on/Power off the terminal	9
3.2 Reading cards	10
3.3 Usage of Front Camera	11
3.4 USB Type-C.....	12
3.5 Magic box.....	12
4. Installation	17
4.1 Recommendations.....	17
4.2 Installing modules.....	18

4.3 Paper roll	21
4.4 Battery	23
4.5 Visual Impaired (VI) Accessory(optional).....	25
5. Recommendations	26
5.1 Safety.....	26
5.2 Security of your terminal	28
5.3 Fixed installation	28
5.4 Cleaning the terminal	29
5.5 Transport and storage	30
6. Standards.....	30
7. Accessibility.....	39
8. RED-DA.....	40
9. Troubleshooting.....	41

1. Introduction

We hope that you will be fully satisfied with your new AXIUM DX4000 Desktop terminal.

Read this guide to understand and make the best use of your terminal. It presents you the necessary information about use, installation, maintenance, safety and security recommendations.



WARRANTY/SECURITY

Use only the power supply included with the product to ensure best performance and safety. Maintenance should only be provided by Ingenico authorized technician.

Failure to comply with these instructions will void the manufacturer's responsibility.



This symbol indicates an important warning.



This symbol indicates a piece of advice.

2. Presentation

2.1 Contents of the box

- AXIUM DX4000 Desktop terminal
- Power adapter
- A battery pack
- Thermal paper roll
- A safety guide
- One magic box



WARNING


The power supply unit provided with your equipment is specially designed for INGENICO AXIUM DX4000 Desktop terminal. Do not use any other power supply and cable. The use of a power supply and cable with apparently similar voltage/current characteristics may damage your terminal.



ADVICE

Keep the package. It must be re-used whenever the terminal is shipped.

2.2 Overview of AXIUM DX4000 Desktop

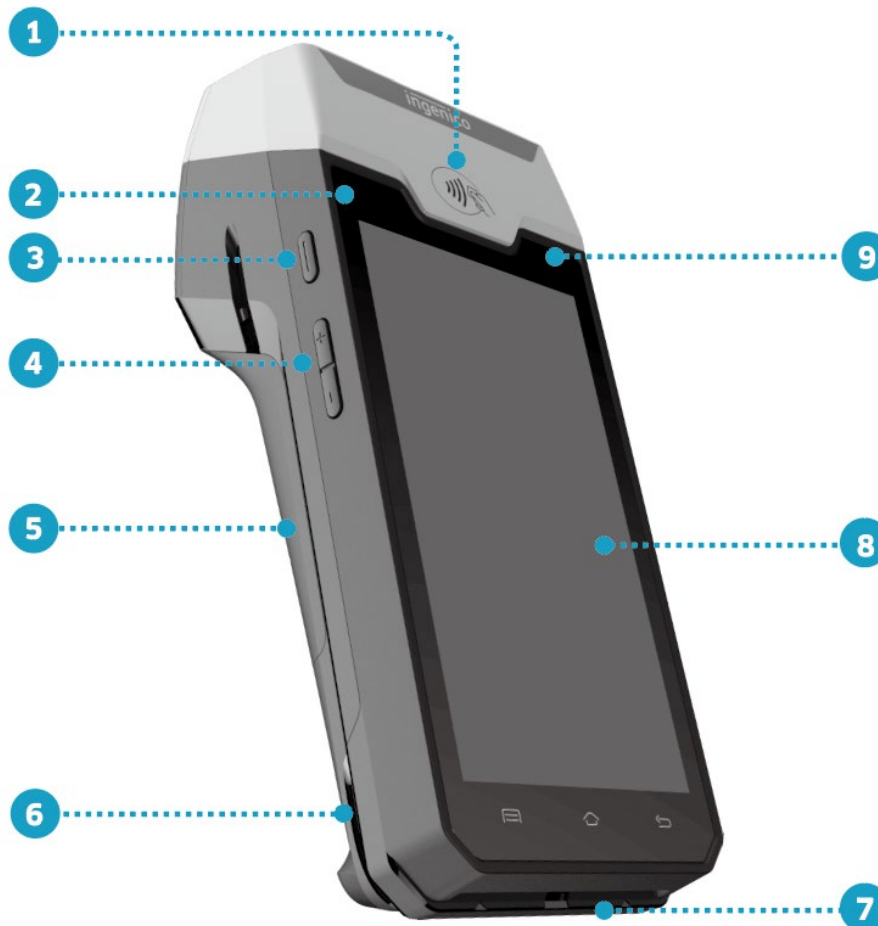

1) Contactless landing zone

2) LEDs for Contactless Card

3) Power Key

4) Volume Keys


5) Battery cover

6) Magnetic card reader

7) Smart Card reader

8) LCD and touch screen

9) Front Camera (optional)

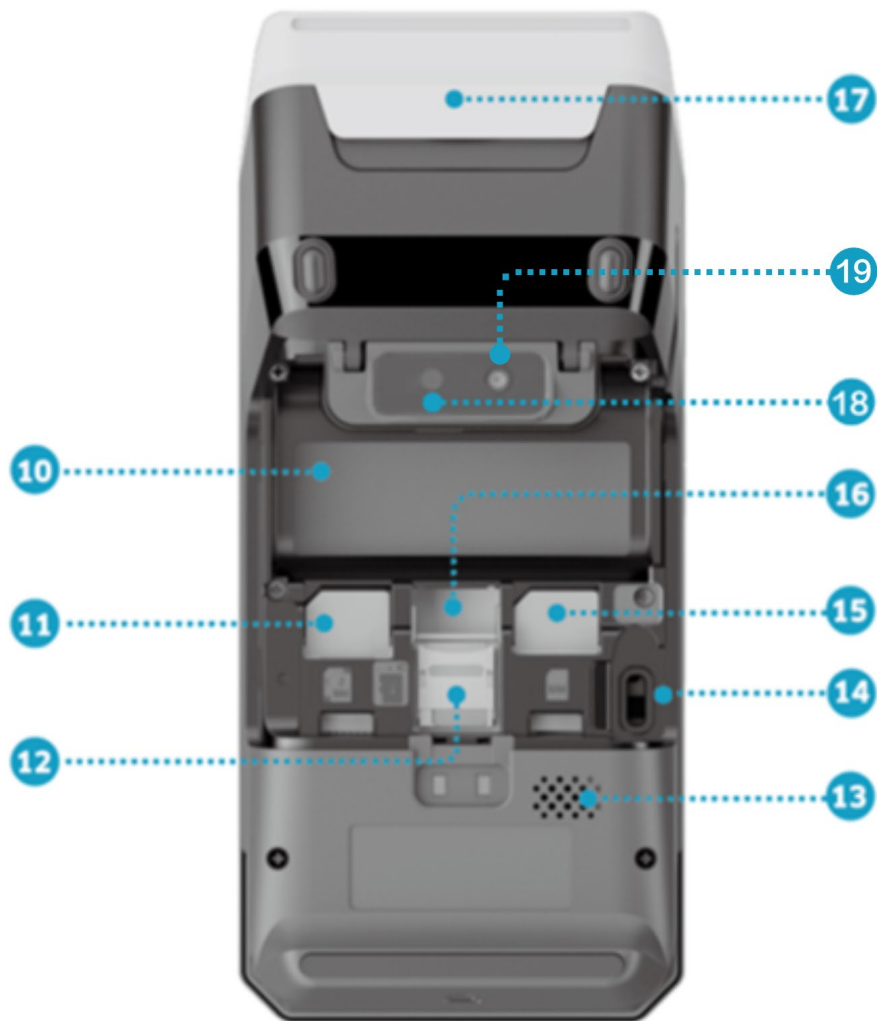

10) Battery compartment

12) Micro SD slot

14) USB Type-C power port

16) Battery socket

18) Rear camera (optional)

11) SIM 2 card slot, SIM 1 card slot or
SAM 2 card slot, SAM1 card slot

13) Speaker

15) SAM card slot or SIM card slot

17) Easy Loading Printer


19) Flash

Weight	435g (including battery)
Dimension (L x W x H)	177.6mm x 80mm x 56.8mm
Electrical mains network	100-240VAC/50-60Hz Class II

2.3 Key Locations and Functions

Three physical keys on the left side of the terminal: a power button and two volume keys.

Three capacitive keys at the bottom of the screen: Menu, Home and Back keys.

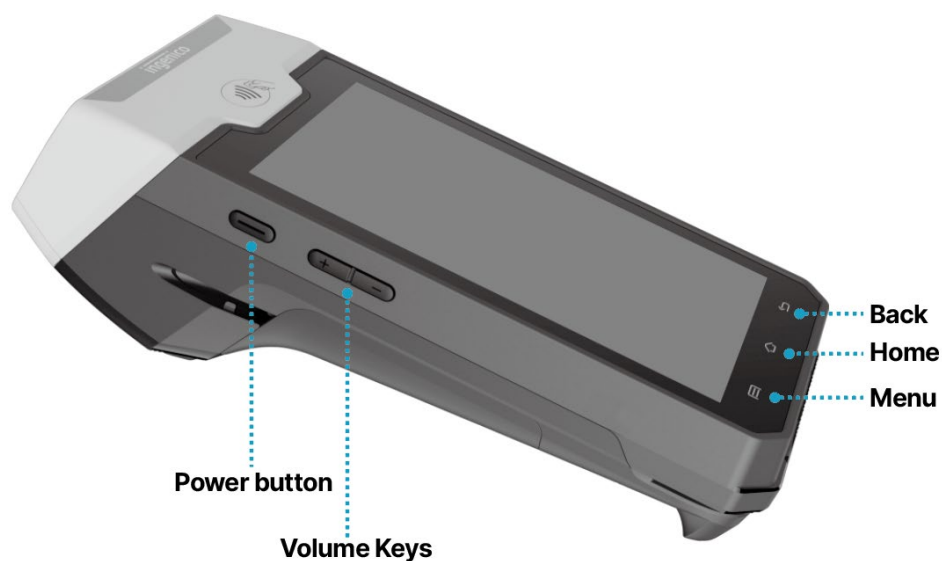

2.4 Touch Panel

The AXIUM DX4000 Desktop is equipped with touch panel that allows you capture functions and menus by your finger.

3. Use of the terminal



ADVICE

Before using the terminal, always check if the roll of paper is present.


3.1 Power on/Power off the terminal

Power On Terminal:

- Make sure the terminal battery is correctly installed.
- Press <Power> button for about 1s until the display is turned on.

Power Off Terminal:

- Press and hold <Power> button for more than 2s until the display shows the following menu.
- Press <Power off>.

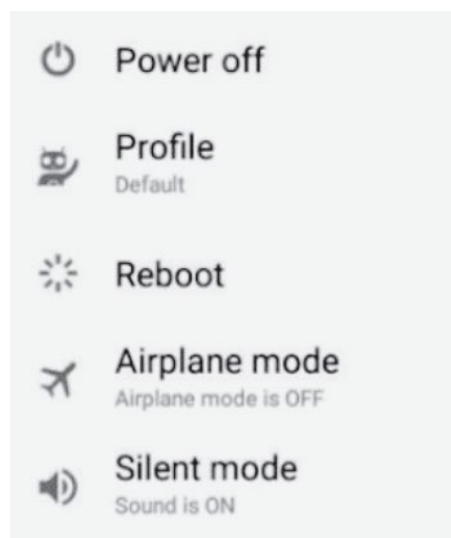

Terminal restart:

- In the event of abnormal behavior of the terminal, press and hold the power button for 8 seconds to force the terminal to power off.


Screen saver mode:

- To conserve battery power, the screen may be turned off with a short press of the power button. (approximately 0.5 seconds).

3.2 Reading cards


Magnetic stripe card

- The card can be read bi-directionally, with the stripe facing the terminal.
- Use regular movement in order to ensure a reliable card reading.

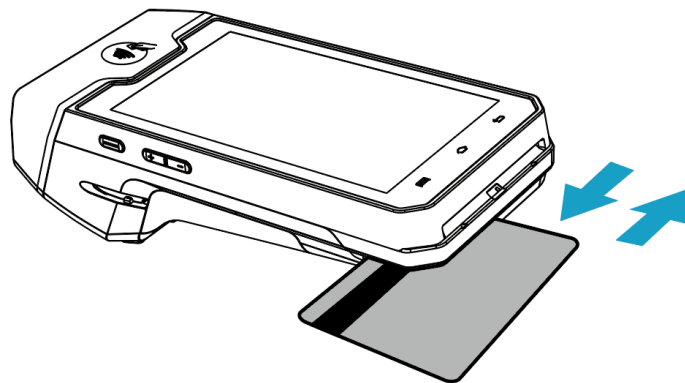


Contactless card

- Bring the card firmly up to the active zone.
- Keep the card close to the reader during the transaction.
- On the front LEDs are displayed to indicate transaction processing.

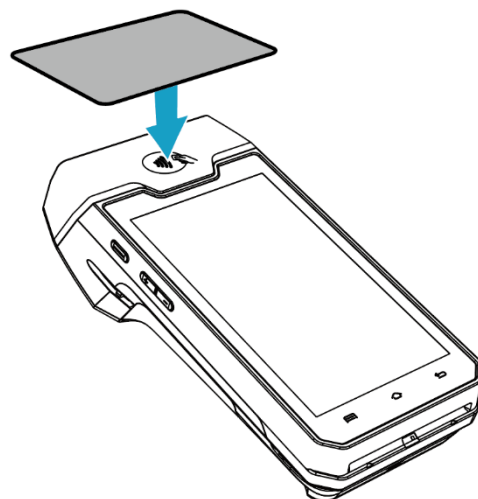


Smart card

- Insert the card horizontally with the metal chip facing upward and leave in position throughout the transaction.

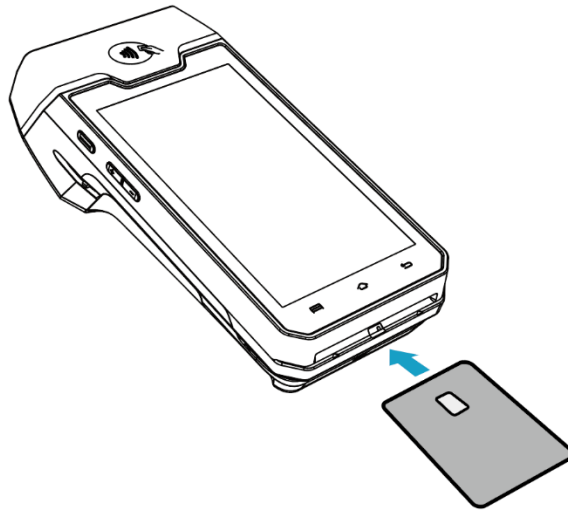


3.3 Usage of Front Camera

- The brightness of the mobile phone must be set to the brightest or not less than the 2/3 of the maximum brightness.
- The screen of the mobile phone must face the front scanning head above the terminal screen and keep it stationary.
- The screen of the mobile phone must be parallel to the front scanning head.
- The vertical distance between the screen of the mobile phone and the front scanning head should be between 10cm~30 cm; 20 cm would be the best.
- The terminal will beep with successful scanning.

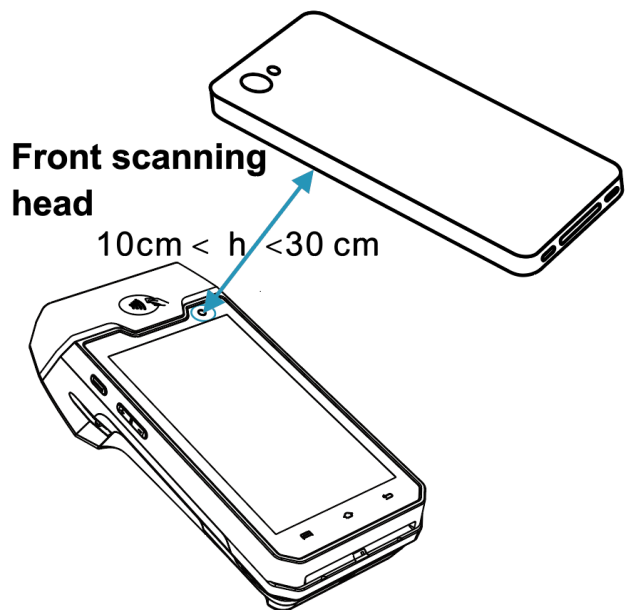

3.4 USB Type-C

- There is a USB type-C connector on the bottom side of the terminal.
- The connector manages Host and Slave connections.

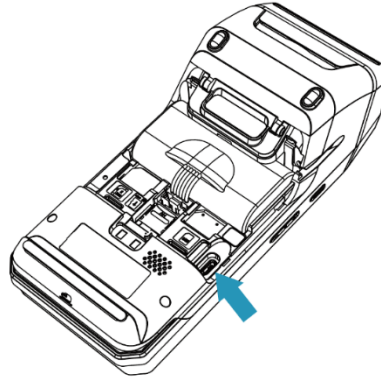


WARNING

To prevent possible hearing damage, do not listen at high volume levels for long periods.

3.5 Magic box

3.5.1 Device Introduction

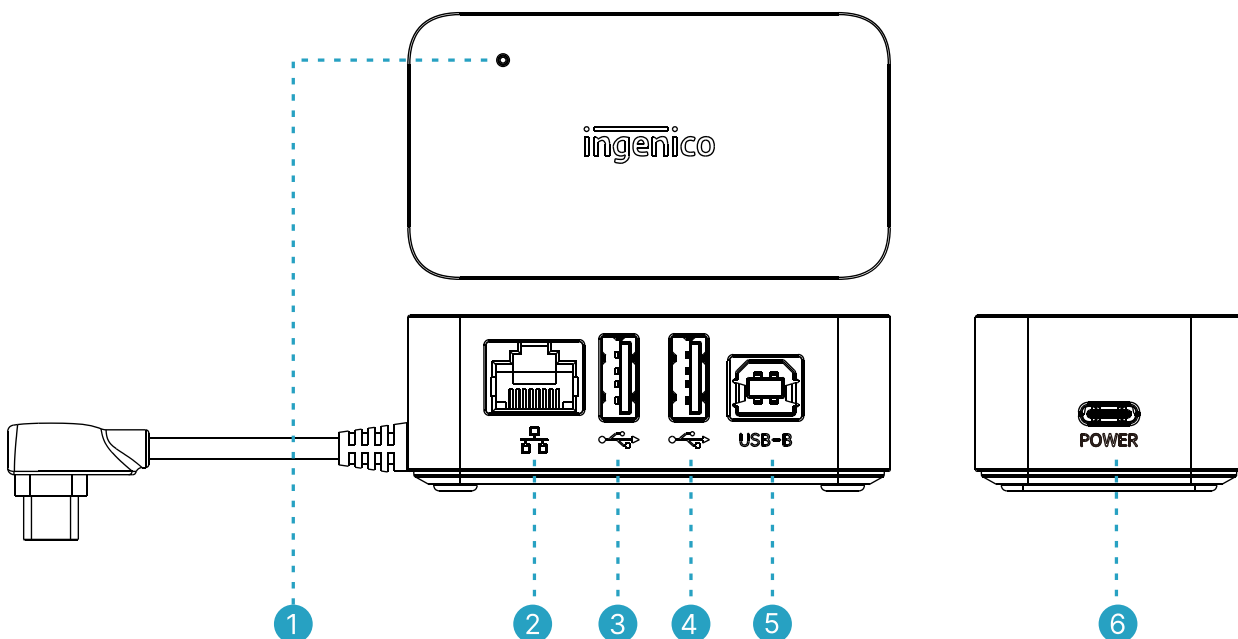

- 1) Power indicate led

3) USB Type-A


5) USB Type-B
- 2) RJ45 ETH port

4) USB Type-A (optional)

6) USB Type-C power port


3.5.2 Interface definition

RJ45 ETH port

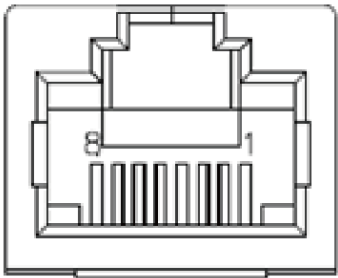


Sequence	RJ45 ETH port
1	ETH_TX+
2	ETH_TX-
3	ETH_RX+
4	NC
5	NC
6	ETH_RX-
7	NC
8	NC

USB Type-A

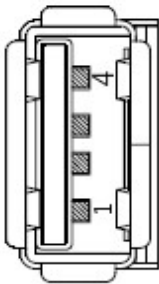

Sequence	USB Type-A
1	VBUS 5.0V
2	D-
3	D+
4	GND

● USB Type-B

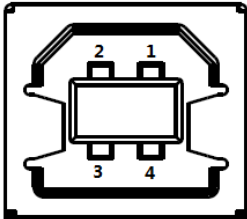

Sequence	USB Type-B
1	Not connect
2	D-
3	D+
4	GND

3.5.3 Product Technology Features

Product Technology Specifications

Port	A USB Type-C power input port A RJ45 ETH port A USB Type-A host port supporting USB2.0 A USB Type-B device port supporting USB2.0 A USB Type-C port supporting USB2.0
Power	Power input: 5.0V DC 2.0A/3.0A USB Type-A host output: 5.0V DC 0.5A USB Type-C output: 5V/1.8A (Power input with 5.0V/3.0A); 5V/1.8A (Power input with 5.0V/2.0A, not use USB Type-A); 5V/1.3A (Power input with 5.0V/2.0A, use one USB Type-A); 5V/0.8A (Power input with 5.0V/2.0A, use two USB Type-A)
Weight	Size:74mm x 41mm x 26mm Net Weight:0.1kg Gross Weight:0.124kg

Environmental conditions

Environmental conditions for transportation, storage and operation.

Temperature	Operating	0°C~40°C / 32°F~104°F
	Storage and Delivery	-20°C~70°C / -4°F ~158°F
Humidity	Operating	10%~90%
	Storage and Delivery	5%~90% (40°C) / (104°F)
Max Altitude	2000m	




WARNING

DX4000 Desktop has been designed to be used with PSU and battery connected.
The magic box ports do not function when the PSU is disconnected.

Product Functions


The magic box has two main functions as below:

- DX4000 charging: Connect the magic box with the power adapter, then connect DX4000 with the magic box to get charged.
- Serves as extended communication ports of DX4000: Network port, USB port.

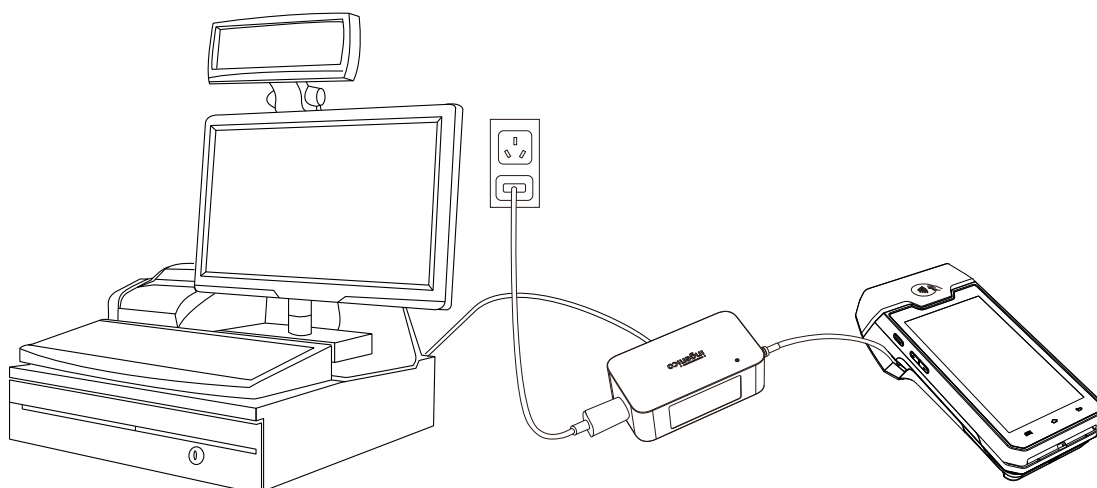


3.5.4 Installation

Connect magic box with DX4000

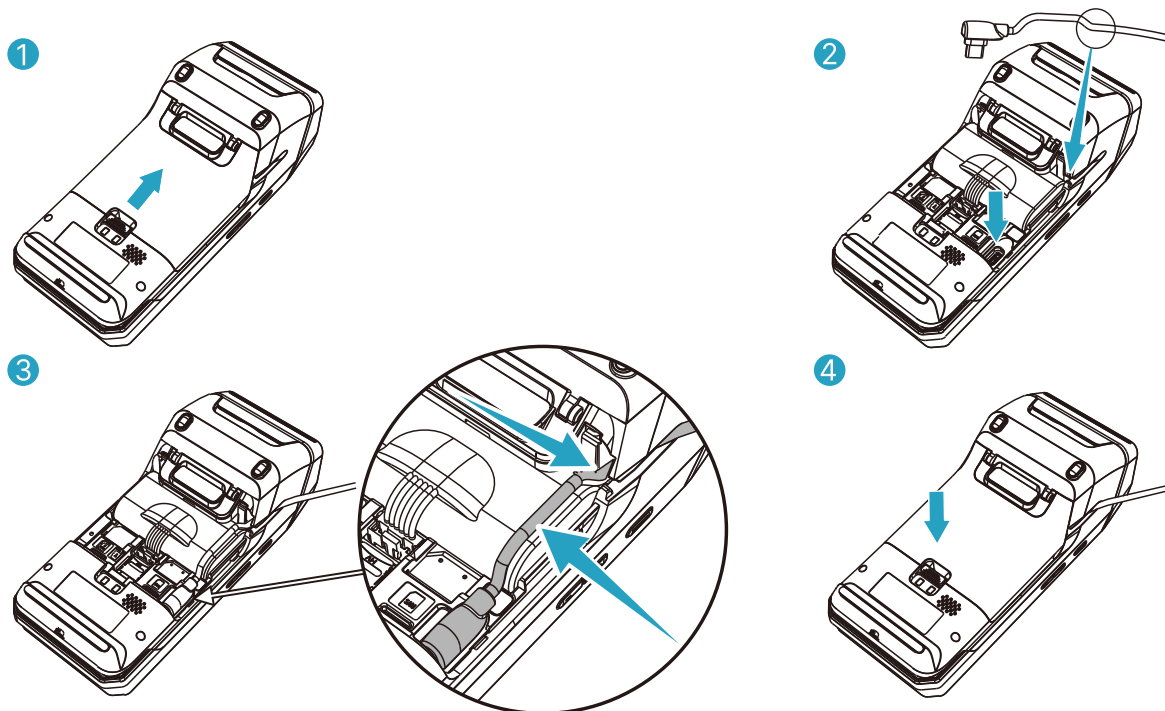

Note: Please put the cable to the correct position in the battery compartment, as the third picture shown.

Fixing of magic box (optional)

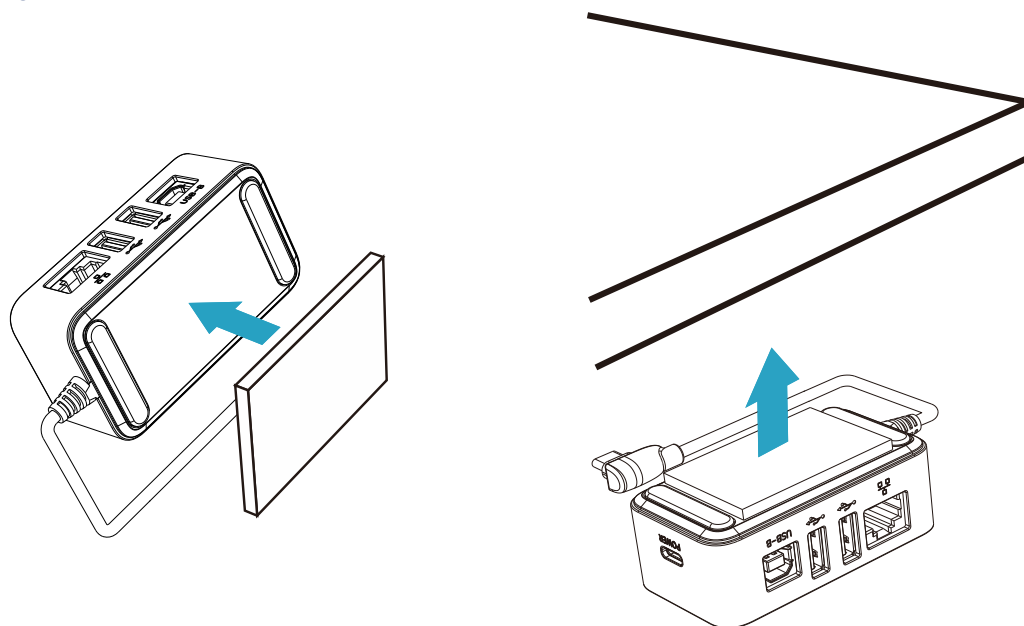

3.5.5 Notes

- Prevent the terminal from sun exposure, high temperature, moisture and other mean conditions.
- Cut off the power before cleaning the device and wipe the main body with dry cloth.
- When the following abnormal phenomena occur, stop running the device immediately, cut off the power supply, and report to the service provider as soon as possible:
 - Harsh noise heard during operation.
 - Impurities or water found in the machine.
 - Unpleasant smell found during operation.

3.5.6 Delivery and Storage

- Avoid rain and snow, sun exposure and mechanical impact.
- The product should be stored in the original box. The box should be at least 15cm away from the floor, at least 50cm from the wall, heat source, cold source, window or air inlet.

4. Installation

4.1 Recommendations

Operating conditions

Ambient temperature*	From -10°C to +50°C (14°F to 122°F)
Max relative humidity	From 10% to 90%, Non-condensing

(*) Excluding battery charging

Battery charging conditions

Ambient temperature	From 0°C to +40°C (32°F to 104°F)
---------------------	-----------------------------------

Storage conditions

Ambient temperature

From -20°C to +70°C (-4°F to 158°F)

Max relative humidity

From 5% to 90%, Non-condensing

4.2 Installing modules

4.2.1 SAM /SIM1/SIM2 or SIM/SAM1/SAM2 or 3SAMs.




WARNING









Switch off the terminal before opening the battery door.

The SAM/SIM connectors are located inside the terminal, in a closed compartment. There are three configurations in terms of the SAM and SIM slot :2SAMs+1SIMs or 1SAMs+2SIM or 3SAMs.

- Turn the terminal and remove the battery door.




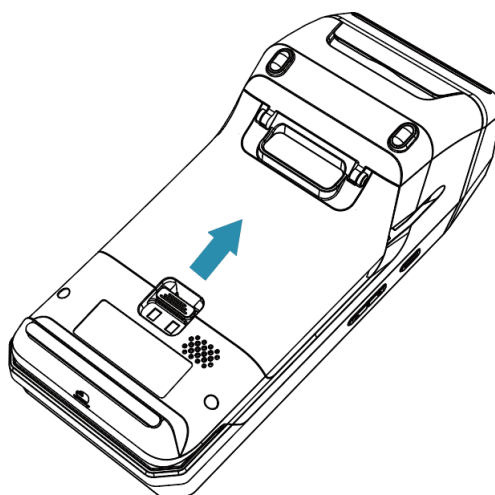


- SAM and SIM1, SIM2 or SIM and SAM1, SAM2 are identified by the engraved marks on the lower housing.

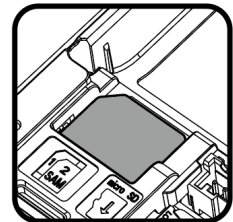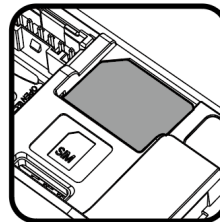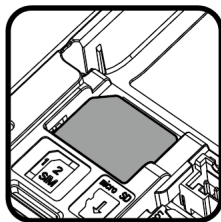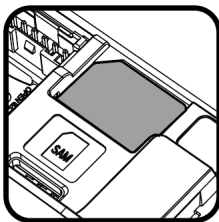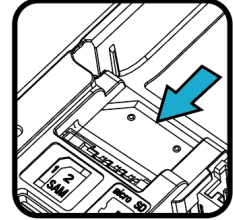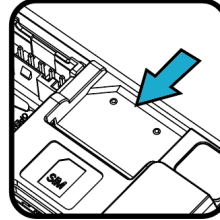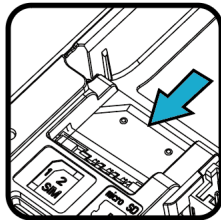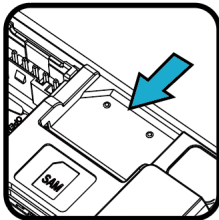

SAM/SIM1/SIM2

SIM/SAM1/SAM2

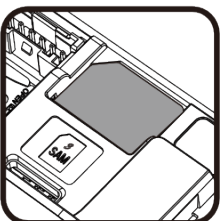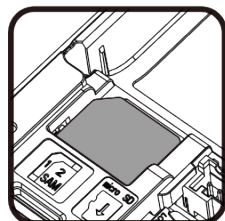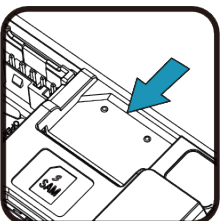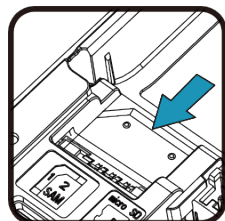

SAM1/SAM2/SAM3

- When introducing a SAM/SIM into slot, be sure to put the cut corner as indicated on the picture.
- Close the battery door.

**ADVICE**

AXIUM DX4000 Desktop is equipped with a dual SIM slot.

When using two SIM cards, it is recommended to insert the bottom one first, then the top one.

When using only one SIM card, it is recommended to insert SIM1 slot (bottom).

**ADVICE**

SIM and SAM cards share the same form factor, please do be careful to the SIM card socket position.



4.2.2 MicroSD Memory Card

**WARNING**

Switch off the terminal before opening the battery door.

MicroSD connector is located inside the terminal, in a closed compartment.

- Turn the terminal and remove the battery door.
- MicroSD is identified by the engraved marks on the lower housing.
- Slide the cover to the end and pull to open it. Insert MicroSD card, push the cover to close and slide it to the top to lock it. Be sure to put the MicroSD card contacts downside and the cut corner as indicated on the figure.
- Close the battery door.

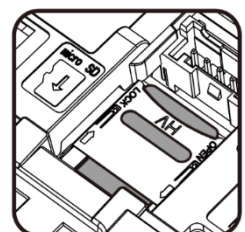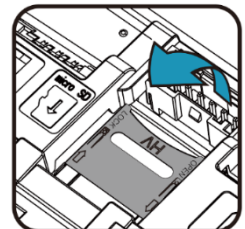

NOTE: The terminal supports MicroSD up to 32GB.

4.3 Paper roll

4.3.1 Main characteristics of INGENICO paper roll

R40 paper roll characteristics	Precisions
Color	White
Width	58mm
Diameter	40mm
Length	About 18 meters

- The thermal paper can be deteriorated by poor storage conditions, so we recommend you avoid:
 - Storage in hot wet places(near air-conditioner, humidity higher than 85%).
 - Exposure to sunlight or ultraviolet for long periods.
 - Contact with organic solvents (solvent type adhesive).
 - Direct contact with materials containing plasticizers (PVC transparent folders or envelopes).
 - Direct contact with diazo papers.
 - Rubbing or pressing the paper too strongly.




WARNING

For best product performance, only use heat sensitized paper approved by Ingenico.

Please note that the paper cutter is very sharp. Do not touch it.

4.3.2 Installing paper roll

- Open the paper cover by lifting the catch located at the top of AXIUM DX4000 Desktop and pull the cover to the rear of the terminal.
- Insert the paper roll in the compartment following the directions shown on the picture below.
- Pull the paper up to the top of terminal, maintain the paper and close the cover.
- Press simultaneously on both upper corners of the paper flap until it clips into position.
- Please note that the paper should be cut off upward.

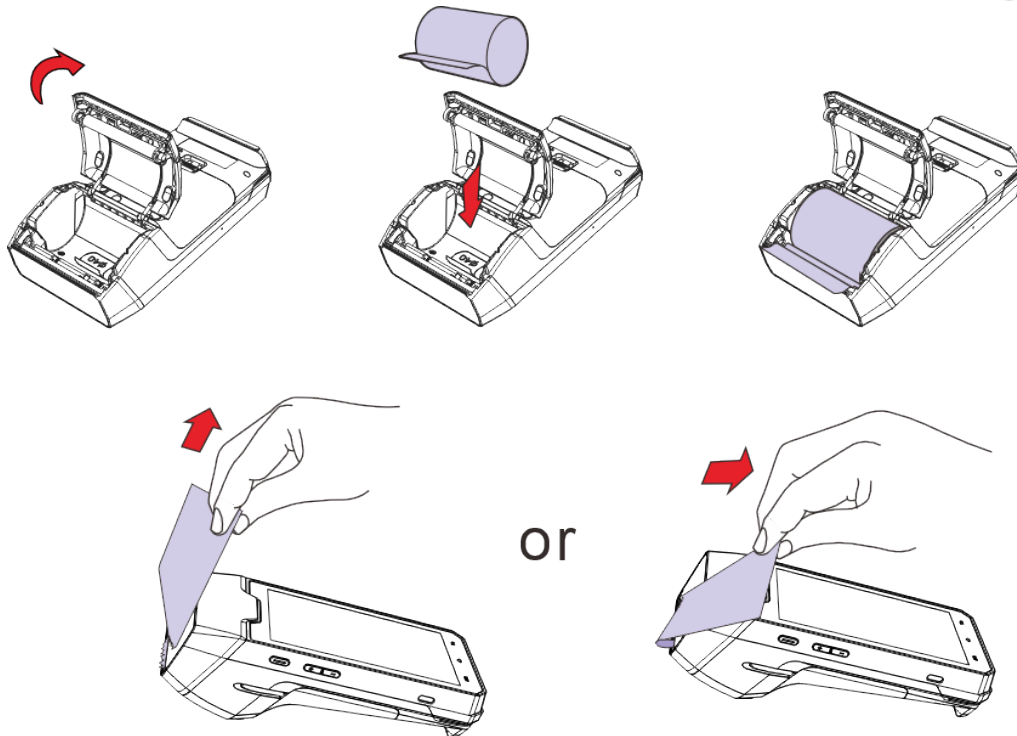

- Incorrect ways of cutting off the paper.



ADVICE

If you insert a new R40 paper roll, tear off the first length (one complete turn to avoid printing on adhesive footprint).



WARNING

Switch off the terminal prior to installing a paper roll. Use only paper approved by Ingenico.

The use of no-approved paper is likely to damage the printer of your terminal.

4.4 Battery

4.4.1 Charging the battery

- When does the battery need to be charged?
 - For safety reasons, the battery included with the terminal is not fully charged. Please charge the battery before use.
 - When used daily, the terminal charges its battery each time the power adapter is connected. Charging starts automatically.
- How can the battery be charged?
 - Connect the power adapter to the USB Type-C connector on the back of the terminal, under the battery door.
 - Connect the power adapter to the power supply mains network.
 - Check the charging status on the top of the screen(it means battery charging).



ADVICE

When the device is powered on or restarted, it will perform a battery recalibration that takes a few minutes until the displayed percentage reflects the actual battery level.

4.4.2 Installing the battery




WARNING

Check that the terminal is not connected to the main electric network. Ensure the terminal is powered off before connecting or disconnecting the battery to avoid damage.


- Turn your terminal and unclip the battery door by pushing the clips as shown with the arrow on the picture.
- Disengage the battery door.
- Take the battery pack included in the box.

- Locate the battery pack connector beside the battery compartment.
- Plug the battery pack connector according to the connector locating system.
- Place the battery pack in its compartment.
- Close the battery door.

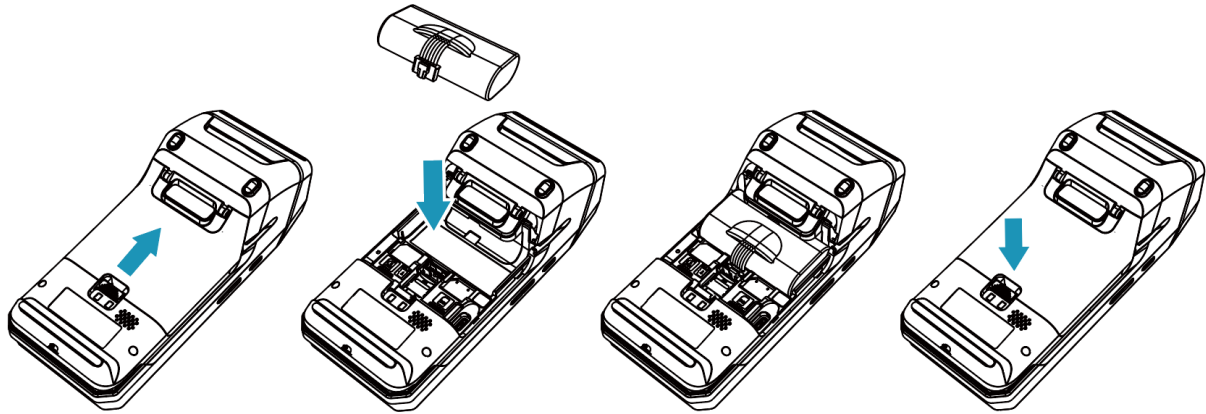

4.4.3 Remove the battery



- Disengage the battery door.
- Remove the battery pack from the battery compartment.
- Unplug the battery pack connector.
- Close the battery door.

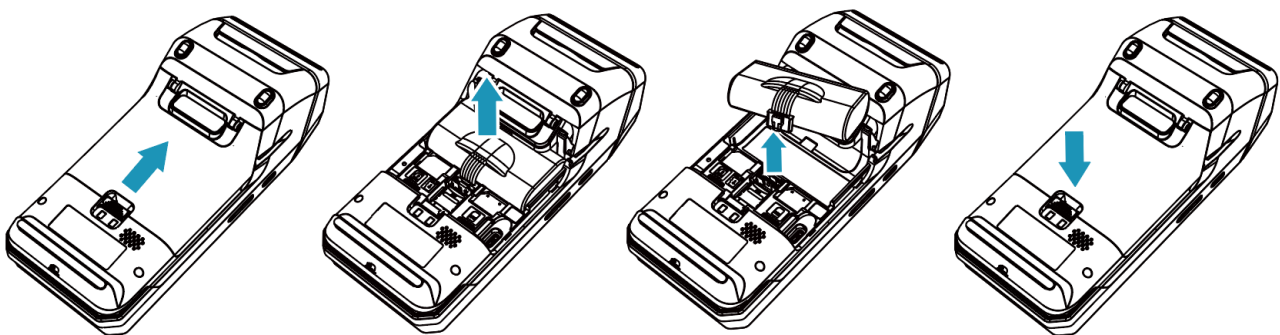

4.4.4 Handling of Battery Fires and Smoke

- **Disconnect and isolate:** If the device is charging, immediately unplug the PSU and turn it off. Move the device to an open area, away from flammable materials and people. Never touch smoking or burning equipment with your bare hands. Use insulated tools (such as dry wooden sticks) to avoid electric shock or burns.
- **Fire extinguishing:** Use a dry powder fire extinguisher or a carbon dioxide fire extinguisher to spray at the smoking area to extinguish the fire. You can also use a large amount of sand to cover the burning equipment.

4.5 Visual Impaired (VI) Accessory

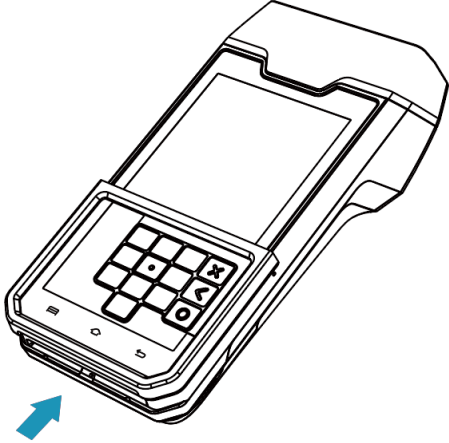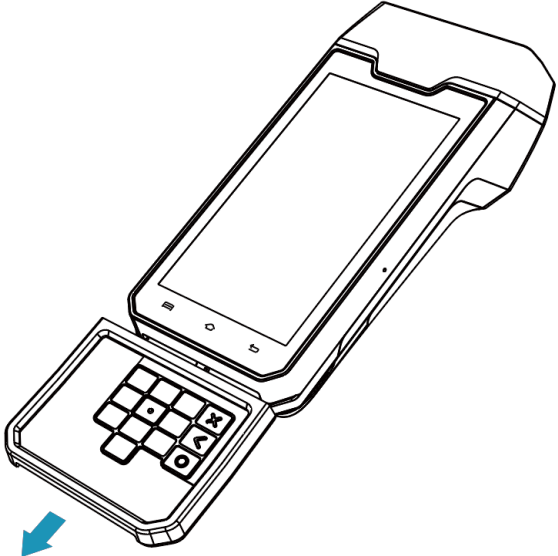Install ● slide the accessory onto the terminal from the bottom.	Remove ● slide the accessory down and away from the terminal.
	

5. Recommendations

5.1 Safety

Powering down the AXIUM DX4000 Desktop

Disconnect the AXIUM DX4000 Desktop power supply block adapter from the electrical mains network.

Lithium cell

The AXIUM DX4000 Desktop is fitted with an internal lithium cell which should only be accessed by a qualified technician.

Battery

- AXIUM DX4000 Desktop is fitted with battery specially designed for this terminal.
- Only use the appropriate chargers and batteries listed in the Ingenico's catalogue.
- Do not short-circuit the battery.
- Do not attempt to open the battery container.
- Used batteries must be disposed of at the appropriate sites.
- For long-term storage: recharge the battery at least twice per year to avoid capacity loss and body deformation due to deep discharge. It is recommended to discard unused batteries sitting in stock for 3 years.
- The battery cover is part of the fireproof enclosure. It is necessary to ensure that the battery cover is on the product.

The lifespan of battery depends on

- Features used.
- Number of charge and discharge cycles.
- Use temperature.

Signs that the battery should be replaced

- The battery fuel gauge / percentage meter drops randomly.
- Charging finishes prematurely even though the battery did not accept much power.
- Sudden capacity drops without warning.
- Self-discharge rate soars and is often uneven.
- The battery gets very hot during charging.
- The battery starts bulging.

**CAUTION**

Risk of explosion battery is replaced by an incorrect type.
Dispose of used batteries according to the instructions.

SAM/ SIM1/SIM2 or SIM/SAM1/SAM2 or Wi-Fi only Readers compartment

- The battery door for battery, SAM /SIM1/SIM2 or SIM/SAM1/SAM2 or Wi-Fi only readers located underneath the terminal, must be in place during the normal operation of the terminal.
- See sections "Installing modules" and "Installing the battery".

Tips for usage environment

- Avoid putting the terminal in direct sunlight, high temperature, moist, dusty or explosive and reduce or eliminate vibration and direct pressure.
- Keep the device and accessories out of reach of children.

On airplanes

- Your terminal must be switched off by removing the battery pack. Remove the battery from the terminal when on an airplane.
- Non-compliance with these safety rules may result in legal action and/or a ban on later access to cellular network services.

Explosion areas

- Some regulations restrict the use of radio equipment in chemical plants, fuel depots and any site where blasting is carried out.
- You are urged to comply with these regulations.
- The terminal shall be protected by a specially fitted and certified cover enabling use in proximity to a fuel pump.

Thunderstorm weather

- According to some relevant reports, the mobile phone electromagnetic wave is good conductor of lightning.
- It is much easier to suffer lightning strikes when the damp atmosphere forms magnetic conductivity, especially in open areas.
- Do not use wireless terminals in thunderstorm weather.

Electronic health appliances

- Your terminal is a radio transmitter which may interfere with health appliances, such as hearing aids, pacemaker, hospital equipment, etc.
- Your doctor or the equipment manufacturer will be able to provide you with appropriate advice.

5.2 Security of your terminal

Your device fulfills current applicable PCI PTS security requirements.

Upon receipt of your terminal you should check for signs of tampering of the equipment. It is strongly advised that these checks are performed regularly after receipt. You should check, for example: that the keypad is firmly in place; that there is no evidence of unusual wires that have been connected to any ports on your terminal or associated equipment, the chip card reader, or any other part of your terminal. Such checks would provide warning of any unauthorized modifications to your terminal, and other suspicious behavior of individuals that have access

to your terminal. Your terminal detects any "tampered state". In this state the terminal will repeatedly flash the message "Warning Detected" and further use of the terminal will not be possible. If you observe the "Warning Detected" message, you should contact the terminal helpdesk immediately.

You are strongly advised to ensure that privileged access to your terminal is only granted to staff that have been independently verified as being trustworthy. The terminal must never be put in or left at a location where it could be stolen or replaced by another device.

5.3 Fixed installation

If the device is to be used in a situation where it is not possible for the cardholder to pick up and shield their PIN entry themselves, the device may be used, but it must be installed in the following manner:

- The device must be angled at 45 or more, so that oversight of the PIN entry from the rear of the device is not possible.
- The device must either be fitted in a swivel stand – so that the customer can position the device at the best angle to prevent oversight – or the device must be fixed in the best possible position to prevent oversight if such a generic position exists in the specific environment to which the device is installed.
- The device environment must be accompanied by conspicuous notices and educational material which informs the customer to shield their PIN during PIN entry.
- The device must be deployed so that oversight from other customers, either in different payment lanes, or in other areas of the shopping environment, is prevented. This may be achieved through the placement of the lanes and device, so that the customer is

automatically positioned between the device keypad and other customers. Alternatively, it may be achieved by the environment in which the device is installed, so that the checkout itself shields the PIN entry process.

- The terminal is exclusively made for indoor use.



ADVICE

Positioning of the terminal on check stand must be in such a way to make cardholder PIN (Personal Identification Number) spying infeasible.

Installing device on an adjustable stand must be in such a way that consumers can swivel the terminal sideways and/or tilt it forwards/backwards to a position that makes visual observation of the PIN-entry process difficult.

Positioning of in-store security cameras such that the PIN- entry keypad is not visible.

NEVER ask the customer to divulge their PIN Code. Customers should be advised to ensure that they are not being overlooked when entering their PIN Code.

5.4 Cleaning the terminal

Good rules for proper cleaning of the terminal are:

- Unplug all wires from the terminal prior to cleaning.
- Apply soapy water or other approved cleaning product to a soft, non-abrasive cloth.
- Cleaning product should be applied to the cleaning cloth and not directly applied or sprayed to the terminal. Failure to follow this step may result in damage to the terminal.
- Do not clean the electrical connections.
- Do not use solvents, detergents or abrasive products: Those materials might damage the plastic or electrical contacts.
- Avoid prolonged exposure of the terminal to the direct rays of the sun.
- Do not put anything other than credit cards into the slot of the smart card reader.

5.5 Transport and storage

When transporting the terminal

- Protect the terminal from snow, rain, and excessive exposure to the sun.
- Transport with care to avoid mechanical impact.
- Do not throw the unit forcibly. Prevent the package from intrusion during transportation to avoid breakage. The product should be stored in the original packaging.
- Do not store in warehouses that also contain harmful gases, or inflammable, explosive, or corrosive chemicals.
- Do not expose to strong mechanical vibrations or strong magnetic fields.
- Packaging should be stored at least 15 cm above the ground and be kept away from heat, cold, windows, or air inlet sources by at least 50cm.
- Follow the specific stored conditions as noted in Section 4 of this document.

6. Standards

CE MARKING

The CE marking indicates AXIUM DX4000 Desktop complies with the requirements of European Directive 2014/53/EU on Radio Equipment for:

- The protection of the health and the safety of the user and any other person.
- The protection requirements with respect to electromagnetic compatibility.
- The protection requirements linked to network protection / protection of data and personal privacy / protection from fraud.

And comply with harmonized standards, as well as RoHS Directive 2011/65/EU and its amendment directives.

❖ DX4000 Desktop 4G WU version

Operating Frequency Band (RF)

GSM B2: 1850–1910MHz (TX); 1930–1990MHz (RX)

GSM B3: 1710–1785MHz (TX); 1805–1880MHz (RX)

GSM B5: 824–849MHz (TX); 869–894MHz (RX)

GSM B8: 880–915MHz (TX); 925–960MHz (RX)

WCDMA B1: 1920–1980MHz (TX); 2110–2170MHz (RX)

WCDMA B2: 1850–1910MHz (TX); 1930–1990MHz (RX)

WCDMA B5: 824–849MHz (TX); 869–894MHz (RX)

WCDMA B8: 880–915MHz (TX); 925–960MHz (RX)
 LTE-FDD B1: 1920–1980MHz (TX); 2110–2170MHz (RX)
 LTE-FDD B3: 1710–1785MHz (TX); 1805–1880MHz (RX)
 LTE-FDD B5: 824–849MHz (TX); 869–894MHz (RX)
 LTE-FDD B7: 2500–2570MHz (TX); 2620–2690MHz (RX)
 LTE-FDD B8: 880–915MHz (TX); 925–960MHz (RX)
 LTE-FDD B20: 832–862MHz (TX); 791–821MHz (RX)
 LTE-FDD B28: 703–748MHz (TX); 758–803MHz (RX)
 LTE-TDD B38: 2570–2620MHz (TX/RX)
 LTE-TDD B40: 2300–2400MHz (TX/RX)
 LTE-TDD B41: 2496–2690MHz (TX/RX)
 Wi-Fi: 2412–2472MHz (TX/RX); 5150–5850MHz (TX/RX)
 Bluetooth/BLE: 2402–2480MHz (TX/RX) ; NFC: 13.56MHz (TX/RX)
 GPS L1 C/A/ GLONASS G1/ BDS B1I:1559–1610MHz

Max Of Transmit Power

FIBOCOM:

GSM850:33.39dBm
 EGSM900:33.5dBm
 DCS1800:30.5dBm
 PCS1900:29.54dBm
 WCDMA :24.5dBm (B1/B8),23.10dBm(B2),23.65dBm(B5)
 LTE:24dBm(B1/B3 /B7/B8/B20/B28/B38/B40),22.9dBm(B5),22.1dBm(B41)
 BT:14.21dBm ; BLE:4.71dBm
 Wi-Fi:19.12dBm@2.4GHz,17.92dBm@5.2GHz,17.11dBm@5.3GHz,16.22dBm@5.6GHz,
 13.97dBm@5.8GHz ;

QUECTEL:

GSM850: 32.87dBm
 EGSM900: 32.63dBm
 DCS1800: 29.94dBm
 PCS1900:29.67dBm
 WCDMA:22.81dBm (B1),23.46dBm (B2),23.74dBm (B5),23.33dBm (B8)
 LTE:24.03dBm(B1), 24.39dBm(B3), 24.03dBm(B5),24.79dBm(B7), 24.13dBm(B8), 23.67dBm(B20),
 23.92dBm(B28), 24.89dBm(B38), 24.44dBm(B40),24.42dBm(B41)
 BT:14.86dBm ; BLE:5.49dBm
 Wi-Fi: 18.56dBm@2.4GHz, 16.35dBm@5.2GHz, 15.95dBm@5.3GHz, 15.17dBm@5.6GHz,
 13.79dBm@5.8GHz ; NFC:22.10dBμA/m@3m

Restrictions in the 5GHz band:

According to Article 10(10) of Directive 2014/53/EU, the packaging shows that this terminal will be subject to some restrictions when placed on the market.

In all EU member states, operations of 5150–5350MHz are restricted to indoor use only.



BE	BG	CZ	DK	DE	EE	IE	EL
ES	FR	HR	IT	CY	LV	LT	LU
HU	MT	NL	AT	PL	PT	RO	SI
SK	FI	SE	NO	IS	LI	CH	TR

❖ DX4000 Desktop Wi-Fi only version

Operating Frequency Band (RF)

2.4GHz Wi-Fi:2412–2472MHz (TX/RX)

BT/BLE:2402–2480MHz (TX/RX)

NFC:13.56MHz (TX/RX)

5.2 GHz Wi-Fi:5150–5250 MHz (TX/RX), 5.3 GHz Wi-Fi:5250–5350(TX/RX),

5.6 GHz Wi-Fi:5470–5725 MHz (TX/RX), 5.8 GHz Wi-Fi:5725–5850(TX/RX)

Max Of Transmit Power

BT:9.06dBm

BLE:3.85dBm

2.4GHz Wi-Fi: 18.53 dBm

5.2GHz Wi-Fi: 16.64dBm,5.3GHz Wi-Fi: 17.01dBm,5.6GHz Wi-Fi: 16.13dBm,

5.8GHz Wi-Fi: 13.82dBm

NFC:13.13dBuA/m@3m

Restrictions in the 5GHz band:

According to Article 10(10) of Directive 2014/53/EU, the packaging shows that this terminal will be subject to some restrictions when placed on the market.

In all EU member states, operations of 5150–5350MHz are restricted to indoor use only.



BE	BG	CZ	DK	DE	EE	IE	EL
ES	FR	HR	IT	CY	LV	LT	LU
HU	MT	NL	AT	PL	PT	RO	SI
SK	FI	SE	NO	IS	LI	CH	TR

❖ DX4000 Desktop Wi-Fi only NAR version

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The antennas used for this transmitter must be co-located or operated in conjunction with any other antenna or transmitter.

The country code selection is for non-US models only and is not available to all US models. Per FCC regulation, all Wi-Fi product marketed in US must fixed to US operation channels only.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

ISED RSS WARNING

This device complies with Innovation, Science and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Under Innovation, Science and Economic Development Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that, the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Conformément à la réglementation d'Innovation, la science et le développement économique Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Tous les changements ou modifications non expressément approuvée par le responsable de la conformité pourrait vider l'utilisateur est habilité à exploiter l'équipement.

Les opérations dans la bande de 5,15 à 5,35 GHz sont limitées à un usage intérieur seulement.

Operations in the 5.15-5.35 GHz band are restricted to indoor usage only.

Specific Absorption Rate (SAR) information

SAR tests are conducted using standard operating positions accepted by the FCC/ISED with the device transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. Before a new product is available for

sale to the public, it must be tested and certified to the FCC /ISED that it does not exceed the exposure limit established by the FCC/ISED, tests for each device are performed in positions and locations as required by the FCC/ISED.

For hand hold and body supported operation, this device has been tested and meets the FCC /ISED RF exposure guidelines when used with an accessory designated for this product.

Les tests SAR sont effectués à l'aide d'un emplacement d'exploitation standard reconnu par la FCC / isedc et l'équipement transmet à son niveau de puissance certifié le plus élevé dans toutes

les bandes de fréquence testées, bien que le SAR soit déterminé au niveau de puissance certifié le plus élevé.

Le niveau de SAR pendant le fonctionnement de l'appareil peut être bien inférieur au maximum. Avant de vendre un nouveau produit au public, il doit être testé et démontrer à FCC / isedc qu'il ne dépasse pas les limites d'exposition spécifiées par FCC / isedc, chaque appareil étant testé à l'endroit et à l'endroit requis par FCC / isedc.

Pour les opérations manuelles et de soutien corporel, l'appareil a été testé pour être conforme aux directives FCC / isedc sur l'exposition aux RF lorsqu'il est utilisé avec les accessoires spécifiés pour ce produit.

Restrictions in the 5GHz band:

According to Article 10(10) of Directive 2014/53/EU, the packaging shows that this terminal will be subject to some restrictions when placed on the market.

In all EU member states, operations of 5150–5350MHz are restricted to indoor use only.



BE	BG	CZ	DK	DE	EE	IE	EL
ES	FR	HR	IT	CY	LV	LT	LU
HU	MT	NL	AT	PL	PT	RO	SI
SK	FI	SE	NO	IS	LI	CH	TR

Environment (WEEE, Batteries and packaging)

This product is labeled in accordance with European Directives 2012/19/EU concerning Waste Electrical and Electronic Equipment (WEEE) and 2013/56/EU concerning Batteries and Accumulators. Those provisions require producers and manufacturers to become liable for take-back, treatment and recycling upon end of life of equipment and batteries.

BATTERIES

If your product contains batteries, they must be disposed of at appropriate collection points.

THE PRODUCT



The cross-out waste bin stuck on the product or its accessories means that the product belongs to the family of electrical and electronic equipment, and waste batteries must not be thrown away but collected separately and recycled.

Please contact your retailers for more detailed information about the compliance solution in place for disposing of your old product and used batteries.

Packaging waste must also be collected separately to ensure proper disposal and recycling.

In this way you can participate in the re-use and upgrading of Electrical and Electronic Equipment Waste, which can influence the environment and human health.

Electrical power supply network

The electrical outlet must meet the following criteria:

- Must be installed near the equipment and easily accessible.
- Do not short-circuit the battery.
- Do not attempt to open the battery container.

The power supply label certification eighteen symbols:



CCC (China Compulsory Certificate) Mark



The Regulatory Compliance Mark (RCM)



International Efficiency Marking Protocol (Energy Star Level 6)



In door use only



“Conformite Europe enne” or CE Mark



Double insulation symbol



5 Years China RoHS symbol



10 Years China RoHS symbol



BSMI(Taiwan)



PSE Mark (Japan)



Recycle in accordance with the waste electronic & electrical equipment directive



Underwriters Laboratories Inc (US Compliance)



Made from recyclable material



Low density version of Polyethylene (LDPE)



 
Chlorinated Polyethylene (CPE)



Risk of explosion if the battery is incorrectly replaced or is placed in a fire



Dispose of batteries at a hazardous waste collection site or recycling facility



Direct Current

7. Accessibility

The product has been designed and manufactured in accordance with the essential accessibility requirements set out in Directive (EU) 2019/882 of the European Parliament and of the Council of 17 April 2019, in particular:

- The user interface is perceivable, operable, understandable, and robust.
- The device supports use by individuals with sensory, motor, or cognitive impairments.

Accessibility has been assessed and tested according to the following harmonized standard: EN 301 549: "Accessibility requirements for ICT products and services" in accordance with the provisions of the Directive (EU) 2019/882 coordination standards specified in Resolution C (2022) 6456

The assessment remains valid as long as the hardware and software integration – including all relevant applications – continues to comply with the requirements set forth by the applicable accessibility directive.

Any significant modifications to the system architecture, user interface, or compatibility with assistive technologies must be reassessed to ensure ongoing compliance.

Some models may need require an external accessory for audio assistance, please contact Ingenico support for more information (<https://www.ingenico.com>).

This user guide is intended for professional use only. Relevant personnel will receive specialized training prior to operation to ensure a full understanding of the operating procedures, safe usage, and proper functionality of the device.

The product is a Point of sales terminal. The intended use of the terminal is to proceed payment transaction. The end user will not have access all functionalities, he will only have access to the transaction acceptance: it means present card, enter pin and validate/check the payment transaction. For any operational questions, end users may contact on-site professionals for assistance.

Power & Scan buttons for professional use only.

8. RED-DA

The product has been designed and manufactured in accordance with the essential requirements of the RED DA (Radio Equipment Directive Delegated Act), as set out in Commission Delegated Regulation (EU) 2022/30 of 29 October 2021 supplementing Directive 2014/53/EU of the European Parliament and of the Council with regard to the application of the essential requirements referred to in Article 3(3), points (d), (e) and (f).

- Article 3.3 (d): Network Protection
- Article 3.3 (e): Data and Privacy Protection
- Article 3.3 (f): Fraud Prevention

RED DA aspects have been assessed and tested in accordance with the harmonized standard EN 18031: "Common security requirements for radio equipment", ensuring alignment with the essential cybersecurity requirements of Directive 2014/53/EU. This applies to the relevant categories and classes of radio equipment as specified in Delegated Regulation (EU) 2022/30.

The assessment remains valid as long as the hardware and software integration – including all relevant applications – continues to comply with the requirements set forth by the applicable RED DA. Any additional software should follow RED DA requirements to remain EU compliant.

Please contact Ingenico support for more information (<https://www.ingenico.com>).

9. Troubleshooting

Q: The terminal cannot be started.

A: The device may be in a low energy status or an application running on the device may be in a defective state. Please ensure that the device is powered and then reset the device. If this still fails, please contact our customer service department for help.

Q: Printer cannot work.

A: This may be caused by abnormal power supply or incorrect paper installation.

Check the battery status or the terminal power connection. If the remaining battery power is insufficient for a complete printing operation, the printer will not print the paper.

Check the printer roller and see if the paper dust cover is correctly installed.
If the problem still exists, please contact our customer service center.

Q: Transaction Processing Failure.

A: Following reasons are likely to cause transaction failure: damaged magnetic card or smartcard SAM card, damaged card reader, improper operation of card swiping, damaged or unconnected, unconnected phone line, etc.

- Try to use more than one magnetic card to test the transaction, to confirm the failure is not caused by magnetic card.
- Make sure card swiping is operated correctly.
- Manually process the transaction instead of card reader. If manual transaction works, the failure may be caused by magnetic card readers.
- Use more than one smart card to test the transaction, to confirm the failure is not caused by smart card. Make sure the SAM card is correctly inserted into the card slot.
- Check if the SIM card is installed correctly and local wireless communication network functions or not.

"INGENICO is a trademark of BANKS AND ACQUIRERS INTERNATIONAL HOLDING. This Document is Copyright © 2026 BANKS AND ACQUIRERS INTERNATIONAL HOLDING. BANKS AND ACQUIRERS INTERNATIONAL HOLDING retains full copyright ownership, rights and protection in all material contained in this document. The recipient can receive this document on the condition that he will keep the document confidential and will not use its contents in any form or by any means, except as agreed beforehand, without the prior written permission of BANKS AND ACQUIRERS INTERNATIONAL HOLDING. Moreover, nobody is authorized to place this document at the disposal of any third party without the prior written permission of BANKS AND ACQUIRERS INTERNATIONAL HOLDING. If such permission is granted, it will be subject to the condition that the recipient ensures that any other recipient of this document, or information contained therein, is held responsible to BANKS AND ACQUIRERS INTERNATIONAL HOLDING for the confidentiality of that information. Care has been taken to ensure that the content of this document is as accurate as possible. BANKS AND ACQUIRERS INTERNATIONAL HOLDING however declines any responsibility for inaccurate, incomplete or outdated information. The contents of this document may change from time to time without prior notice, and do not create, specify, modify or replace any new or prior contractual obligations agreed upon in writing between BANKS AND ACQUIRERS INTERNATIONAL HOLDING and the user. BANKS AND ACQUIRERS INTERNATIONAL HOLDING is not responsible for any use of this device, which would be non-consistent with the present document. All trademarks used in this document remain the property of their rightful owners."

www.ingenico.com

16 Place de L'Iris Tour Cb21 92400 Courbevoie – France

Banks and Acquirers International Holding, SAS / 814 767 216 RCS Nanterre